



A United Volleyball Supply, LLC. Company • 14615 NE 91st ST, Bldg B, REDMOND, WA 98052 • 1996-2007© VOLLEYBALLUSA.COM
 PH: 1-800-494-3933 • FAX: 425-827-2230

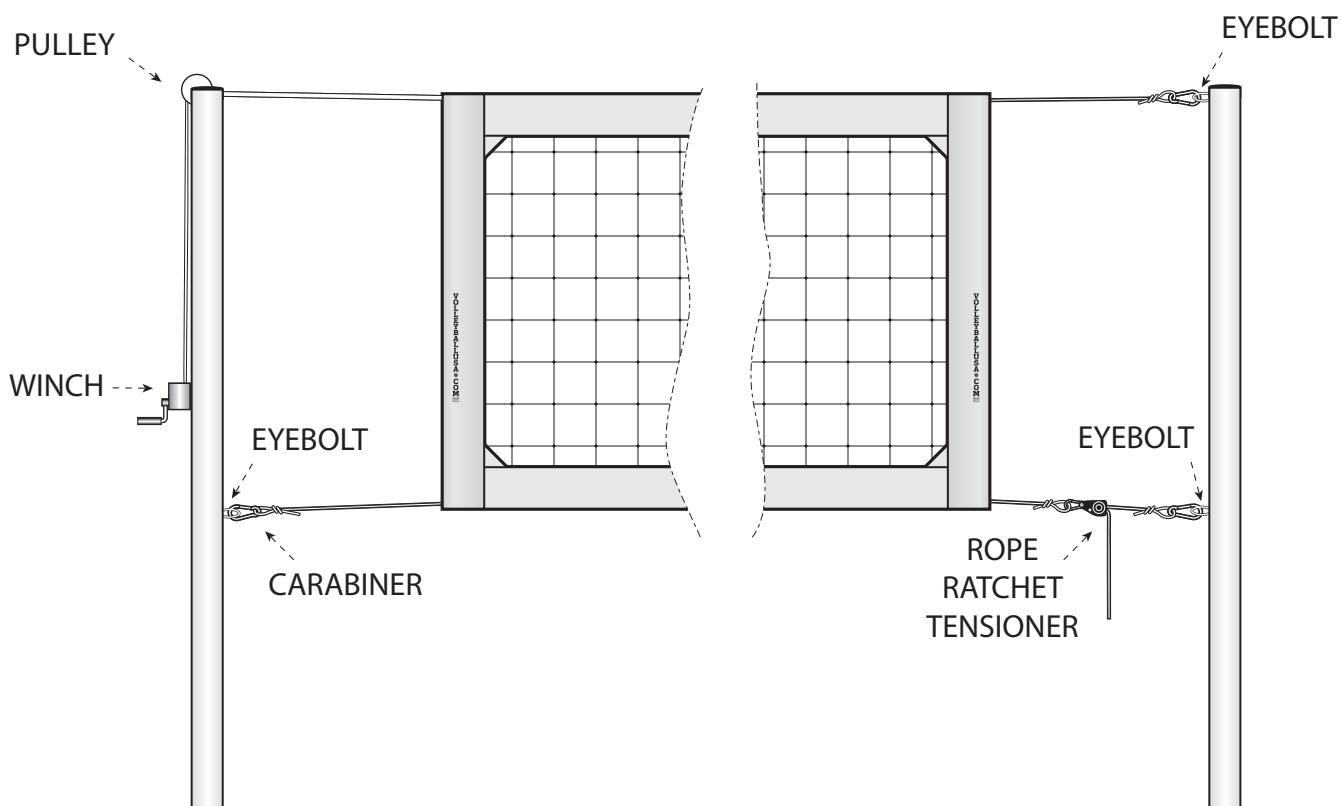

- 1) - Dig two 3 foot deep holes approximately 1 foot in diameter, 36 feet apart from each other on center.
- 2) - Cement poles (or sleeves, if purchased) 18 inches into the ground using four 80 pound bags of concrete around each pole or sleeve. This will allow 9 feet of pole above ground.
- 3) - If you ordered a net with steel cables, you will need to create a loop on one end using two cable clamps on each cable included on your net.
- 4) - Connect net as shown in illustration above.

HOW TO TIE A LOOP KNOT

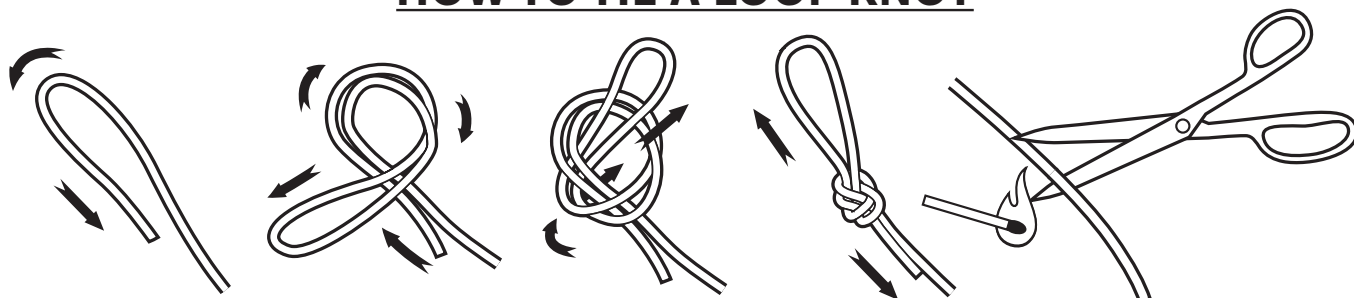

CUT UNDESIRED LENGTHS (OPTIONAL). FLAME TREAT ENDS OR CUTTING AREA WITH MATCH OR LIGHTER TO KEEP CORD FROM FRAYING. USE CAUTION WHEN WORKING WITH FIRE.